

PowerView® PV380-R2 Murphy Standard Configuration



* **Operations Manual**

* Products covered in this document comply with European Council electromagnetic compatibility directive 2004/108/EC and electrical safety directive 2006/95/EC.

In order to consistently bring you the highest quality, full-featured products, we reserve the right to change our specifications and designs at any time. The latest version of this manual can be found at www.fwmurphy.com.

Warranty - A limited warranty on materials and workmanship is given with this Murphy product. A copy of the warranty may be viewed or printed by going to www.fwmurphy.com/support/warranty.htm

Table of Contents

Introduction	5
Engine and Transmission Parameters.....	6
Navigation and Keypad Functions.....	6
First-Time Startup	11
Parameter Gauge Settings	15
Adjusting Menu Selections	18
User Settings	19
Service Reminders.....	25
Regen	26
Set Points	27
Software Version.....	28
System Settings.....	29
Faults.....	44
Diagnostics and Service	46
LED Indicators	46
Indicator Lamps	46
Supported PGNs	49
Specifications	55

Introduction

Congratulations on purchasing the PowerView® Model PV380 R-2. This advanced tool provides monitoring of Tier 4/Euro Stage 4 compliant electronic engines. The PV380 monitors multiple J1939 parameters and provides basic engine alarm/shut-down information.

This manual was developed to help you become familiar with the PV380 display, identify navigation basics and recognize useful options and features. The clear 3.8-inch monochrome screen makes it easy to see parameters in the display, especially in bright sunlight.


Engine and Transmission Parameters

The following are some of the engine and transmission parameters that can be displayed in standard units.

- Engine Speed
- Engine Temperature
- Engine or Machine Hours of Operation
- Total Machine Hours
- Battery Voltage
- Coolant Temperature
- Engine Oil Pressure
- Engine Fuel Level
- Discharge Pressure
- Suction Pressure
- Diesel Exhaust Fluid (DEF) Level (Tier 4 only)
- Active Fault Codes
- Stored Fault Codes

Navigation and Keypad Functions

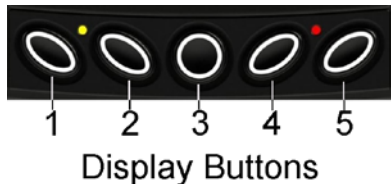


The keys on the keypad are as follows:












When directed to press a symbol within the procedural steps, it is referring to the button below the displayed symbol.






Each display button may have alternating functions within the configuration as shown in the tables below.

Key 1	Function
	Alternates between parameter screen sets or moves the cursor one position to the left
	Moves highlight up when in certain Menu selections
	Decreases the number when in various screens

Key 2	Function
FAULTS	Displays Diagnostic Messages (Faults) and Stored Codes
	Moves highlight down when in certain Menu selections
	Increases the number when various screens

Key 3	Function
	Displays the Main Menu entrance point
	Serves as the Escape/Return to Previous Menu button

Key 4	Function
	Decreases the Throttle set point
Stored Codes	Displays the Stored Codes when in Diagnostic Messages
	Decreases various settings
OEM	Enters the OEM Menu
	Moves the cursor one slot at a time to the right

Key 5	Function
	Increases the Throttle set point
ACTIVE FAULTS	Displays the Active Faults screen
	Serves as the Enter key for menu selections
	Increases various settings
	Moves the cursor to the next cell when customizing parameters on the home screen
	Moves the cursor one slot at a time to the right and displays alternate menu choices/screens

First-Time Startup

When power is applied to the PV380, the **Warning** and **Shutdown** lights illuminate and the Murphy logo displays.




On electronic engines, if a preheat message is being actively broadcast from the Engine Control Unit (ECU), a **Wait to Start** symbol displays below the Murphy logo as shown in the next image.



NOTE: The above screen will not be displayed for mechanical engines.

The PV380 will skip the Wait to Start (WTS) screen if the ECU stops transmitting the WTS message or if the engine speed is >500 RPM. However, if the ECU never transmits the WTS message, the user will only see the splash screen for three seconds after the key is turned on then the gauge screen appears.

Once the engine is running (> 500 RPM), the engine information (electrical or mechanical) will display and alternate with the chosen parameter set when the  key is pressed.


Engine – Electrical




Parameter Set – Electrical (default parameters)




Engine – Mechanical

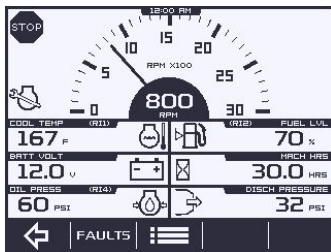



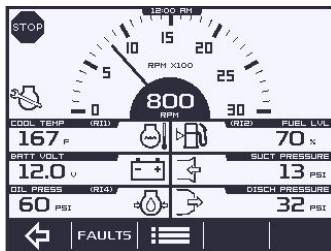



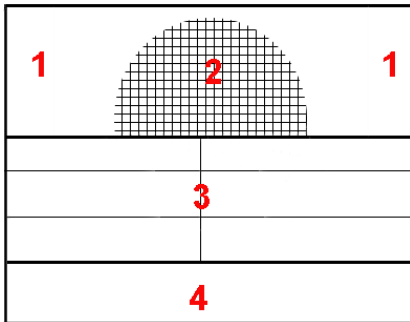

Parameter Set – Mechanical (default parameters)




Parameter Gauge Settings



1. Alert and Warning Icon area: Up to eight symbols can be shown at one time in the icon area to represent warnings, Tier 4 status and service indicators. The most important symbol will be shown in the upper left. The following symbols can be shown in this area:

Icon(s)	Function(s)
 	Shutdown (electronic or by mechanical set point) Warning
 	HEST Regen Inhibit (Regen Inhibit is restricted when a HEST alarm is present)
	Diesel Particulate Filter (DPF)
 	DEF level (electronic only) Service indicator
	Engine Emissions System Failure

- 2. Tachometer Area:** The tachometer is the most important reading and is shown in the largest gauge form that will fit the screen. This represents the Engine speed with an option to choose a 3000, 4000 or 6000 RPM dial (See Customizing the Display on page 36 for more information).
- 3. Parameter Area:** The following parameters are the electronic engine defaults until other parameters are selected from the menu. Only the second screen, areas 3 through 6 may be changed:
- Engine Oil Pressure (numeric)
 - Engine Temperature (numeric)
 - Battery Voltage (numeric)
 - Fuel Level (numeric)
 - 2 – DEF Level (Tier 4 only) or target speed when DPF/SCR is disabled (see Note on next page)
 - Target Speed – appears on screen for 5 seconds when the user throttles the engine (see arrow below)

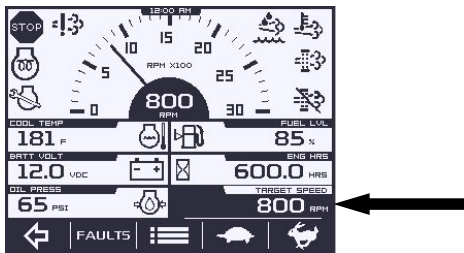

4. **Button Selection Display:** The button functions can change depending on the screen displayed.

NOTE: Tier 4 engines have fewer customizable locations due to requirements in readings being visible at all times.






Adjusting Menu Selections


NOTE: Once parameters are changed, back out of all menus and initiate a power cycle for changes to take effect.

User Settings

Brightness and Contrast



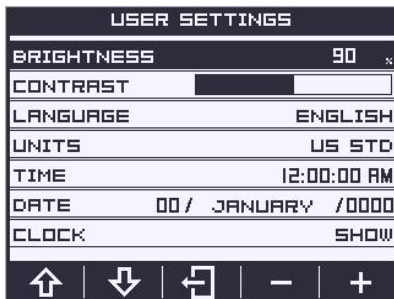

Follow these steps to adjust the Brightness and Contrast:


1. Press  to display the Menu.
2. Arrow to USER SETTINGS. Press  and arrow to the desired selection.
3. Press  and  to adjust the selection.
4. Press  to save and exit the menu.



Language



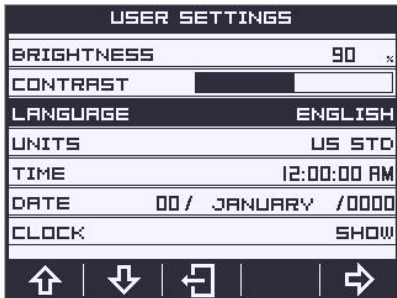

Follow these steps to change the Language:


1. Press  to display the Menu.
2. Arrow to USER SETTINGS and then press  to enter, then arrow to LANGUAGE.
3. Press  to cycle through the available languages (English, French, German, Spanish and Italian).
4. Press  to save and exit the menu.



Units





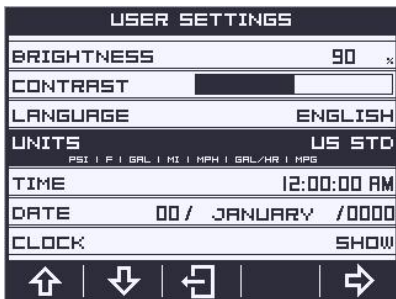

Follow these steps to adjust the Units:


1. Press  to display the Menu.
2. Arrow to USER SETTINGS. Press  and then arrow to UNITS.
3. Press  to choose US STD, Metric KPA or Metric BAR.
4. Press  to save and exit the menu.



Time





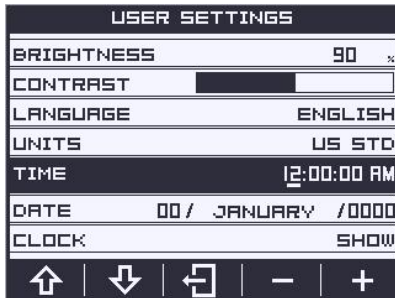

Follow these steps to adjust the Time:

1. Press  to display the Menu.
2. Arrow to USER SETTINGS. Press  and then arrow to TIME. The cursor will be beneath the hour.
3. Press  and  to adjust the selection.
4. To adjust the minutes, press , and the cursor will move to the right.
5. Repeat steps 3 and 4 to adjust the minutes and seconds.
6. Press  to save and exit the menu.



Date





Follow these steps to adjust the Date:


1. Press  to display the Menu.
2. Arrow to USER SETTINGS. Press  and then arrow to DATE.
3. Press  and  to adjust the day.
4. Press , and the cursor will move to the month.
5. Repeat steps 3 and 4 to adjust the month and year.
6. Press  to save and exit the menu.



Clock



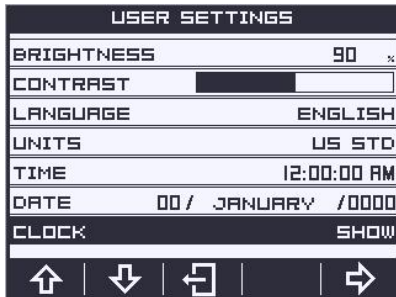


Follow these steps to display or hide the Clock:


1. Press  to display the Menu.
2. Arrow to USER SETTINGS. Press  and then arrow to CLOCK.
3. Press  to alternate between SHOW and HIDE.
4. Press  to save and exit the menu.



Service Reminders





Service Reminders exist for the engine air filter, engine oil, fuel filter, hydraulic oil and when to service the engine and machine.

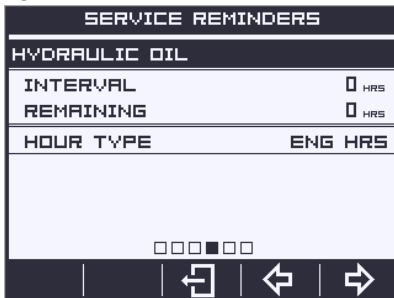1. Press  to display the Menu.
2. Press  to Service Reminders. Press  to enter.
3. Press  or  to scroll through the read-only screens.










Regen

Follow these steps to initiate a Regen:

1. Press  to display the Menu.
2. Press  to Regen. Press  to enter.
3. Press  once more on Request DPF Regen.
4. In answer to the question “Request Diesel Particulate Filter Regen?” use Key 3 for Yes and Key 5 for No.



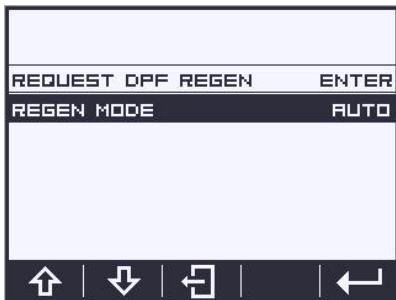

Follow these steps to change the Regen mode:

1. Press  to display the Menu.
2. Press  to Regen. Press  to enter.
3. Press  to Regen Mode.
4. Press  to scroll through the available choices of Auto or Inhibit. N/A will only appear on non-Tier 4 engines.
5. Press  to return to the Menu.



Set Points



Follow these steps to view the Set Points:

1. Press  to display the Menu.
2. Press  to Set Points. Press  to enter.
3. The first screen will display configured Shutdowns and the specified criteria. Press  to view the second screen listing Warnings and the specified limits.



Software Version

To display the software version information (useful for Enovation Controls' personnel to identify which configuration the customer is using), follow these steps:




1. Press  to display the Menu.
2. Arrow to Software Version and press . The following screen will appear:


SOFTWARE VERSION	
CONFIGURATION	0 . 0 . 00000
BOOT LOADER	0 . 0 . 00000 . 00
FIRMWARE	0 . 0 . 00000 . 00

3. Press  to exit the Menu.

System Settings



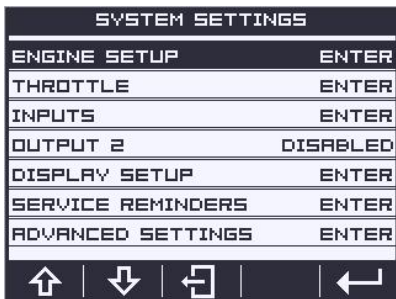

Follow these steps to enter System Settings:

1. Press  to display the Menu.
2. Press  to System Settings. Press  to enter.
3. Utilize keys 1, 2 and 3 to input the password (3482) and key 5 to enter the category.



Engine Type


Follow these steps to change the Engine Type:

1. Press  to display the Menu.
2. Press  to System Settings. Press  to enter.
3. Utilize keys 1, 2 and 3 to input the password (3482) and key 5 to enter.
4. Arrow to highlight Engine Setup. Press  to enter.
5. Engine Type will be highlighted. Press key 5 to toggle between Electronic or Mechanical.

Review the table below to be informed of specific parameters for each type:

Engine Type	Specific Parameters Available
Electronic	<ul style="list-style-type: none">• DPF (enabled or disabled)• SCR (enabled or disabled)• ECU Source Address (default: ALL)• Display Source Address (default: 43)• Overspeed<ul style="list-style-type: none">○ Shutdown<ul style="list-style-type: none">▪ % Over High Speed▪ Fault at High Speed○ Warning<ul style="list-style-type: none">▪ % Over High Speed▪ Fault at High Speed○ Disabled• Machine Hours<ul style="list-style-type: none">○ Set Machine Hours○ Clear Machine Hours

NOTE: Selecting Electronic engine type will enable the Throttle setting to appear in System Settings. This option will not appear with the Mechanical engine type.

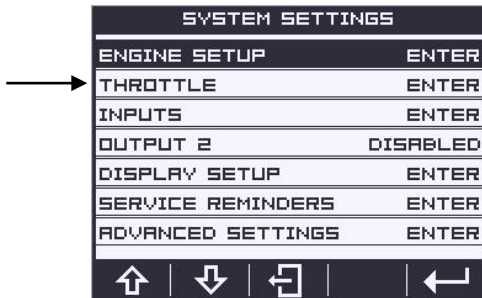

The revised System Settings menu will then have the following components:








System Setting	Specific Parameters Available
Throttle	<ul style="list-style-type: none">• Throttle (Enabled or Disabled)<ul style="list-style-type: none">○ Throttle Type<ul style="list-style-type: none">▪ Display

- | | |
|--|--|
| | <ul style="list-style-type: none">▪ Switch (Resistive Input 1 will be Throttle Switch UP, Resistive Input 3 will be Throttle Switch DOWN)▪ Knob (Resistive Input 1 will be Disabled, Resistive Input 3 will be Throttle Knob)○ Throttle Mode<ul style="list-style-type: none">▪ For Types of Display and Switch: Manual, Preset▪ For Type of Knob: Manual○ Setpoints<ul style="list-style-type: none">▪ Ramp Rate Per Second▪ Inc/Dec Step Size○ Low Speed Limit○ High Speed Limit (with Overspeed at 5%) |
|--|--|

Engine Type	Specific Parameters Available
Mechanical	<ul style="list-style-type: none">• Speed Calibration• Overspeed<ul style="list-style-type: none">○ Shutdown<ul style="list-style-type: none">▪ % Over High Speed▪ Fault at High Speed○ Warning<ul style="list-style-type: none">▪ % Over High Speed▪ Fault at High Speed○ Disabled• Machine Hours<ul style="list-style-type: none">○ Set Machine Hours○ Clear Machine Hours





Inputs

Follow these steps to change the Inputs:

1. Press  to display the Menu.
2. Press  to System Settings. Press  to enter.
3. Utilize keys 1, 2 and 3 to input the password (3482) and key 5 to enter.
4. Arrow to highlight Inputs. Press  to enter.
5. Highlight the appropriate Resistive Input and press  to enter.
6. Choose the appropriate Function, Sender, Fault and Set Point for each Resistive Input.
7. Press  to return to the Menu.
8. Choose the appropriate Function, Sender, Fault and Calibration for each Analog Input.
9. Press  to return to the Menu.

Output 2

Follow these steps to change the Output 2:

1. Press  to display the Menu.
2. Press  to System Settings. Press  to enter.
3. Utilize keys 1, 2 and 3 to input the password (3482) and key 5 to enter.
4. Arrow to highlight Output 2. Press  to choose Disabled, Comm Shdn or Air Shutoff.

Comm SHDN: When the Digital Output 2 is configured as Comm SHDN, Digital Output 2 will turn ON for any CAN or internal diagnostic shut-down message. Digital Output 2 will turn back OFF when all the shut-down messages are cleared.






Air Shutoff: The Digital Output 1 is disabled, the Digital Output 2 is turned on, and an internal Diagnostic Message (red lamp) is displayed when the following conditions are met:






- Air Shutoff is chosen
- Throttle is Enabled
- Pressure Shutdown, Temp Shutdown or Overspeed Shut (Type of Shutdown) is chosen
- Engine speed is greater than Overspeed Shutdown or 100 RPM more than the target speed

5. Press  to return to the Menu.

Display Setup






Follow these steps to change the Display Setup:


1. Press  to display the Menu.
2. Press  to System Settings. Press  to enter.
3. Utilize keys 1, 2 and 3 to input the password (3482) and key 5 to enter.
4. Arrow to highlight Display Setup. Press  to enter.
5. Highlight Gauge Setup and press  to enter.

6. To establish the default settings for the unit, highlight Use Defaults and press . A Restoring Default Gauge Setup message will appear for approximately 6 seconds.
7. For an alternate gauge display other than the default, highlight Customize Gauges and press .
8. The gauge screen will appear with a check mark beside the upper left selectable gauge. Press display keys 1 or 2 to cycle through the available options for that portion of the screen.
9. To move to the next portion of the screen to customize, press display key 5. The check mark will move.
10. Repeat steps 8 and 9 until all gauges have been customized. Press  to return to the Menu.
11. Highlight Engine Speed Dial and press  to alternate between 3000, 4000 and 6000 RPM.
12. Highlight Hour Meter Type and press  to alternate between Engine Hours and Machine Hours.

NOTE: If the type is set to Engine Hours, the unit must be connected to an ECU and be receiving data to reset the service reminder. If Engine Hours data is not being received, the service reminder will not reset.






NOTE: The interval remaining time may be negative when the service reminder is expired.



13. Press  to be returned to the Display Setup menu.
14. Highlight Fault Conversion and press  to alternate between J1939 V1, V2, V3 or V4.
15. Highlight Auto Ack Fault and press  to alternate between Disabled or Enabled.
16. Highlight Clear Fault Codes and press  to enter. A message will appear stating "Request Sent to Clear Fault Codes."
17. **WARNING:** this step will take effect immediately after pressing . Highlight Factory Reset and

press . A message appears stating “Restoring Factory Defaults. The display will power cycle in 2 seconds.” The unit will then begin a power cycle, and all previous customized settings will be restored to the original default settings.

Service Reminders






Follow these steps to view and reset Service Reminders:



1. Press  to display the Menu.
2. Press  to System Settings. Press  to enter.
3. Utilize keys 1, 2 and 3 to input the password (3482) and  to enter.
4. Arrow to highlight Service Reminders. Press  to enter.
5. Service Reminders exist for Engine Oil, Fuel Filter, Engine Air Filter, Hydraulic Oil, Service Engine and Service Machine. Use display keys 4 and 5 to view each one.
6. To change the Interval time, highlight the selection with display keys 1 or 2 and press the - or + display

- keys 4 and 5 to adjust the hours. Each press of the button will decrement or increment the hours by 10.
7. Highlight Hour Type and press the – or + display keys 4 and 5 to alternate between Engine Hours and Machine Hours.
 8. To simply reset the hours, highlight Reset and press  (OK).
 9. Press  to be returned to the System Settings menu.

Advanced Settings

Follow these steps to enter and review the Advanced Settings:

1. Press  to display the Menu.
2. Press  to System Settings. Press  to enter.
3. Utilize keys 1, 2 and 3 to input the password (3482) and  to enter.
4. Arrow to highlight Advanced Settings. Press  to enter.


5. Utilize keys 1, 2 and 3 to input the password (1802) and  to enter.
6. TSC1 is currently the only parameter in Advanced Settings. Press  to enter.
7. Highlight each SPN and press display keys 4 and 5 (- and +) to cycle through the available options for each. Refer to the following table:


SPN	Available Options
695 (Eng Override Control Mode)	0 – Override Disabled 1 – Speed Control
696 (Eng Req Speed Control Conditions)	0 – Transient Optimized for driveline disengaged and non-lockup conditions* 1 – Stability Optimized for driveline disengaged and non-lockup conditions* 2 – Stability Optimized for driveline engaged and/or in lockup condition 1 (vehicle driveline)*



	<p>3 – Stability Optimized for driveline engaged and/or in lockup condition 2 (PTO driveline)*</p> <p>*(The above descriptions taken from SAE International document J1939-71 May2012)</p>
897 (Override Control Mode Priority)	<p>0 – Highest Priority</p> <p>1 – High Priority</p> <p>2 – Medium Priority</p> <p>3 – Low Priority</p>
3349 (TSC1 Transmission Rate)	<p>0 – 1000 mS</p> <p>1 – 750 mS</p> <p>2 – 500 mS</p> <p>3 – 250 mS</p> <p>4 – 100 mS</p> <p>5 – 50 mS</p> <p>6 – 20 mS</p> <p>7 – 10 mS</p>

Faults

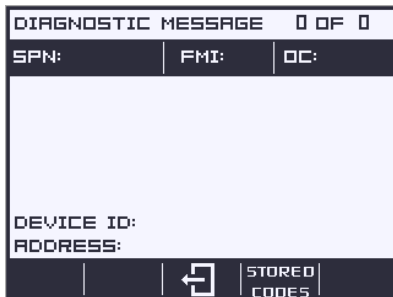


Follow these steps to display the Active Faults:

1. Press  to display the Menu when Throttle is enabled or FAULTS when Throttle is disabled or the engine type is Mechanical.
2. Press FAULTS once more if needed. The following screen will appear:



Press the  and  to scroll through additional messages if any are present. Each saved code shows the SPN (Suspect Parameter Number), FMI (Failure Mode Identifier) and OC (Occurrence Count). The OC indicates if the same fault occurred more than once. If available, a text explanation of the Warning or Shutdown and the Device ID Address also displays.

To view the Stored Codes, press Stored Codes. Stored codes are requested from the ECU. While the data is being requested, REQUESTING and RECEIVING DATA will be displayed. If data is not received from the ECU, TIMEOUT will be displayed. Pressing Stored Codes once more will request data from the ECU again. If data is received, the Diagnostic Message screen (#) of (#) will appear.

Press the  and  to scroll through additional messages, if any are present. Press Get Faults to receive additional Stored Faults. Press  to return to the Faults screen.

Diagnostics and Service





LED Indicators





The PV380 features amber (Warning) and red (Shutdown) colored LEDs on the front keypad. These are illuminated according to the J1939 error definition for alarms and shutdown conditions.



Indicator Lamps




On each gauge screen and menu (where space allows), the following indicator lamps shall be shown:









Icon	PGN	SPN	Description
	DM1		Stop Diagnostic Lamp: indicates an active DM1 stop fault
	DM1		Warning Diagnostic Lamp: indicates an active DM1 fault
	64892	3697	High Exhaust Temperature (HEST) lamp: indicates regeneration in process
	64892	3703	DPF Particulate Filter Restricted Lamp: indicates a Regen is needed





Icon	PGN	SPN	Description
	64892	3698	DPF Inhibit Lamp: indicates an inhibited Regen status
	65110	1761	Diesel Exhaust Fluid (DEF) Lamp: displays when the fluid level drops below 12%
	-	-	Service Indicator
	65110	5246	Engine Emissions System Failure






Supported PGNs


The following table of parameters shall be available for selections based on being actively broadcast on the CAN bus:









	Description	PGN	Icon
1	Accelerator Pedal Position 1	61443	ACCEL PED1
2	Percent Load at Current RPM	61443	
3	Actual Engine Torque	61444	
4	Engine Speed	61444	
5	Trip Distance	65248	TRIP DIST
6	Total Vehicle Distance	65248	VEH DIST
7	Total Engine Hours	65253	ENG HRS
8	Trip Fuel	65257	TRIP FUEL

	Description	PGN	Icon
9	Total Fuel Used	65257	FUEL USED
10	Engine Coolant Temperature	65262	
11	Fuel Temperature	65262	
12	Engine Oil Temperature	65262	
13	Engine Intercooler Temp	65262	INTC TEMP
	Fuel Delivery Pressure	65263	
15	Engine Oil Level	65263	
16	Engine Oil Pressure	65263	
17	Coolant Pressure	65263	
18	Coolant Level	65263	

	Description	PGN	Icon
19	Wheel Based Vehicle Speed	65265	VEH SPD
20	Fuel Rate	65266	FUEL RATE
21	Instantaneous Fuel Economy	65266	FUEL ECON
22	Average Fuel Economy	65266	AVG ECON
23	Barometric Pressure	65269	BARO PRES
24	Air Inlet Temperature	65269	
25	Boost Pressure	65270	BST PRES
26	Intake Temperature	65270	
27	Air Filter Dif. Pressure	65270	
28	Exhaust Gas Temperature	65270	
29	Alternator Potential	65271	ALT VOLT

	Description	PGN	Icon
30	Electrical Potential	65271	
31	Battery Potential Voltage	65271	
32	Transmission Oil Pressure	65272	
33	Transmission Oil Temp	65272	
34	Fan Drive	65213	
35	Auxiliary Temperature	65164	AUX TEMP
36	Auxiliary Pressure	65164	AUX PRES
37	Selected Gear	61445	SLECT GEAR
38	Current Gear	61445	CURNT GEAR
39	Output Shaft Speed	61442	OUT SFT SP

	Description	PGN	Icon
40	Input Shaft Speed	61442	IN SFT SPD
41	Torque Converter Lockup	61442	TORQ LOCK
42	Auxiliary IO Status 1	65241	AUX IO 1
43	Accelerator Pedal Switch	61443	PEDAL SWT
44	Engine Desired Op Speed	65247	DES ENG SP
45	Throttle Position	65266	THROTTLE
46	Air Inlet Pressure	65270	
47	Actual Engine Timing	65159	ENG TIMING
48	Total Engine Revolutions	65253	ENG REVOLU
49	Requested Gear	65256	REQ GEAR

	Description	PGN	Icon
50	Fuel Level	65276	
51	Hydraulic Pressure	61448	
52	Hydraulic Temp	65128	
53	Machine Hours	61444	
54	Diesel Exhaust Fluid Level	65110	DEF LVL
55	% Soot	64891	% SOOT
56	% Ash	64891	% ASH
57	Exhaust Filter Temp	64947	
58	Exhaust Filter Inlet Temp	64948	
59	Discharge Pressure	Analog Input #1	
60	Suction Pressure	Analog Input #2	

Specifications

Electrical

Display	3.8" (9.65 cm) QVGA (320x240 pixels); monochrome transfective LCD with heater, MTFB 50,000 hours
Resolution	QVGA, 320 x 240 pixels
Backlighting	White LED
Communications	(1) CAN 2.0B (J1939 protocol and proprietary messaging), (1) RS-485 serial (Modbus)
Protocols	J1939, NMEA 2000
Connection	Deutsch DT Series 6- and 12- pin
Keyboard	5 tactile buttons
Input	(4) resistive analog (3) analog; 0-5V / 4-20 mA (1) frequency; 2-10,000Hz, 3.6-120VAC
Output	(2) 500mA; switched low-side
Voltage	6-36 VDC; reverse polarity protected

Environmental

Operating Temperature	-40° C to +85° C (-40° F to +185° F)
Storage Temperature	-40° C to +85° C (-40° F to +185° F)
Protection	IP66 and 67 (IEC/EN 60529)
Standards Compliance	Electrical Safety: 2006/95/EC Electromagnetic Compatibility: <ul style="list-style-type: none">• 2004/108/EC:<ul style="list-style-type: none">• EN 61000-6-4:2001 (emission)• EN 61000-6-2:2001 (immunity)• EN 50121-3-2 and EN 12895• SAE J1113/2, 4, 11, 12, 21, 24, 26 and 41
Vibration	7.86g random vibrate (5-2,000Hz)
Shock	±50g shock in 3 axes

- NOTES -

In order to consistently bring you the highest quality, full-featured products, we reserve the right to change our specifications and designs at any time. MURPHY products and the Murphy logo are registered and/or common law trademarks of Enovation Controls, LLC. This document, including textual matter and illustrations, is copyright protected by Enovation Controls, LLC, with all rights reserved. © 2016 Enovation Controls, LLC. A copy of the warranty may be viewed or printed by going to www.fwmurphy.com/warranty.

ENOVATION CONTROLS CORPORATE HEADQUARTERS

5311 S 122ND EAST AVENUE
TULSA, OK 74146

ENOVATION CONTROLS – SAN ANTONIO OFFICE

5757 FARINON DRIVE
SAN ANTONIO, TX 78249

ENOVATION CONTROLS – HOUSTON OFFICE

105 RANDON DYER RD
ROSENBERG, TX 77471

ENOVATION CONTROLS LTD. – UNITED KINGDOM

CHURCH ROAD LAVERSTOCK
SALISBURY SP1 1QZ UK

MURPHY ECONTROL TECHNOLOGIES (HANGZHOU) CO, LTD.

77 23RD STREET
HANGZHOU ECONOMIC & TECHNOLOGICAL DEVELOPMENT AREA
HANGZHOU, ZHEJIANG 310018 CHINA

DOMESTIC SALES & SUPPORT**ECONTROL PRODUCTS**

PHONE: 210 495 9772
FAX: 210 495 9791
EMAIL: INFO@ENOVATIONCONTROLS.COM
WWW.ECONTROL.COM

MURPHY PRODUCTS

PHONE: 918 317 4100
FAX: 918 317 4266
EMAIL: SALES@ENOVATIONCONTROLS.COM
WWW.FWMURPHY.COM

MURPHY CONTROL SYSTEMS & SERVICES

PHONE: 281 633 4500
FAX: 281 633 4588
EMAIL: CSS.SOLUTIONS@ENOVATIONCONTROLS.COM

MURPHY INDUSTRIAL PANEL DIVISION

PHONE: 918 317 4100
FAX: 918 317 4124
EMAIL: IPOSALES@ENOVATIONCONTROLS.COM

INTERNATIONAL SALES & SUPPORT**UNITED KINGDOM**

PHONE: +44 1722 410055
FAX: +44 1722 410088
EMAIL: SALES@ENOVATIONCONTROLS.EU
WWW.FWMURPHY.EU

CHINA

PHONE: +86 21 6237 5885
FAX: +86 21 6237 5887
EMAIL: APSALES@ENOVATIONCONTROLS.COM

LATIN AMERICA & CARIBBEAN

PHONE: 918 317 2500
EMAIL: LASALES@ENOVATIONCONTROLS.COM

SOUTH KOREA

PHONE: +82 70 7351 4100
EMAIL: SKOREASALES@ENOVATIONCONTROLS.COM

INDIA

PHONE: +91 91581 37633
EMAIL: INDIASALES@ENOVATIONCONTROLS.COM



FM 28221 (Tulsa, OK - USA)
FM 620667 (San Antonio, TX - USA)
FM 78221 (Kosenberg, TX - USA)
FM 29422 (UK)



FM 523851 (China) TS 589322 (China)